

TECHNOLOGY BECOMES INVISIBLE.

GLASS & MIRROR



OWNER'S MANUAL

IN WALL For In Wall Installation

Register your product and get support at: www.ad-notam.com

INTRODUCTION

Thank you for choosing ad notam. You acquired a high-quality product; ad notam means supreme technology and design.

CONTENT

•	SAFETY	
•	WARNINGS	
•	CLEANING AND PRODUCT CARE	
•	ENVIRONMENTAL	
•	AD NOTAM CONFIGURATOR	
•	PRODUCT DELIVERY	
•	MOUNTING YOUR AD NOTAM	
	- IN WALL MOUNTING - WALL PREPARATION	
	- IN WALL MOUNTING - FINAL ASSEMBLY	
•	ADJUSTING YOUR DIGITAL CLOCK	
•	COPYRIGHTS, LICENCES & CERTIFICATES	
•	TROUBLESHOOTING	
•	SERVICE & SUPPORT	
•	CONTACT INFORMATION	

To prevent damage to your ad notam product or injury to yourself or to others, read the safety instruction in their entirety before installing and operating the product. Keep these safety instructions where all those who use the product will read them. Warranty will be null and void for any damage resulting from installation and operation not respecting these instructions.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove cover (or back). There are no user serviceable parts inside. Refer all servicing to qualified personnel.

THIS ICON MARKS WARNING. Indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.

THIS ICON MARKS WARNING. Indicates important literature concerning operation and maintenance. To prevent possible injury, read all warning before using this product.

THIS ICON MARKS CAUTION. To prevent the spread of fire, keep candles or other open flames away from this product at all times.

WARNINGS

- ▲ LIQUIDS. Never expose the product to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact your authorized dealer immediately to have the product checked before use.
- ▲ GLASS. Parts of this product are made out of glass. Handle with care to avoid injury or damage.
- ▲ HANDLING. Parts of this product are made out of glass and sharp material. Always wear safety shoes and gloves when handling the products or its packaging.
- ▲ HANDLING. ad notam products are made of heavy components. Two or more people may be needed to transport large goods. When handling the goods make sure to separate and disconnects all parts before any movement. Do not put stress on the LCD nor glass/mirror. Prepare the environment properly to gently accommodate any item on a adequately soft and cushioned surface.
- ▲ GLASS. The corners and edges of the glass are very delicate. Take care that they do not hit the wall, ceiling or floor in any way to avoid damages and splitoffs.
- ▲ IRREGULAR OPERATION. If this product does not operate normally, in particular, if there are any unusual sounds or smells coming out of it, unplug it

immediately and contact an authorized dealer or service center.

- ▲ WET ENVIRONEMT. For installations in wet-rooms specific installation guidelines apply, which are to be seen in the context of placing a power adaptor outside of certain protection zones. These regulations differ by region. Please contact a specialist for this. In Germany electrical installations are to be performed by a skilled technician, while observing the regulations of the standard DIN VDE 0100 T.701.
- ▲ INDOOR USE. The product is specifically designed for indoor use. There is danger of fire and of electric shocks and damage to the device if it is operated outdoors.
- ▲ VENTILATION. Never insert objects into nor cover the ventilation slots or other openings on the product.
- ▲ HEAT SOURCES. Do not place this product near or over heat sources or where it is exposed to direct sunlight. Never expose your product, remote control or batteries to excessive heat.
- ▲ FLAMABLE GAS. Do not use in the presence of flammable gas, as this could result in explosion or fire.
- ▲ CHILDREN. Keep out of reach of children. Failure to observe this precaution could result in injury.

CLEANING AND PRODUCT CARE

CLEANING. Use a soft damp cloth (cotton, flannel, etc.) and gently wipe the surface of the product. Wiping with a hard cloth or using strong force may scratch the surface of the product. Never touch, push, rub or strike the screen with any object.

CLEANING. Avoid using benzene, thinner and other solvents as they may deform the product and may cause the paint to peel off. Using a chemical cloth (wet/dry sheet type cloth, etc.) may cause damages and corrode the product. To avoid deformation and color fading, wipe off water drops as soon as possible. ENVIRONMENT. On rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the glass front. To prevent this, do not expose the product to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously after the product has played for a few hours.

ENVIRONMENT. The product must be stored in a dry and well ventilated room, without extreme temperature fluctuations. Heat sources and aggressive active substances may not be stored in the proximity of this product

ENVIRONMENTAL

ad notam aims to design, produce, deliver and dispose eco-friendly products. Our environmental policy applies to the entire product lifecycle and business activities.



LOW STANDBY POWER

Our highly advanced power circuitry brings down power consumption to an extremely low level while in standby mode



EUROPEAN ENERGY LABEL

The European Energy Label informs you on the energy efficiency class of this product. The greener the energy efficiency class of this product is, the lower the energy it consumes. On the label, you can find the energy efficiency class, the average power consumption of this product in use and the average energy consumption for 1 year based on 4 hours' operations per day.




END OF USE

When this crossed-out wheeled bin symbol is attached to a product the product is covered by the European Directive 2002/96/EC. Inform yourself about the local separate collection system for electrical and electronic products. Act according to your local rules and do not dispose your old products with your normal household waste. Correct disposal of the product helps to prevent potential negative consequences for the environment and human health.

AD NOTAM CONFIGURATOR

Your own unique product, made by ad notam, has been designed with ad notam online configurator. Your configuration is a valuable reference. Keep a hardcopy of your configuration with this owner manual.

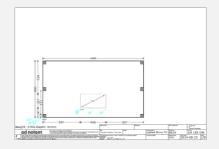


The *Shop Drawing - Front View* is necessary for Mirrors and Glass production, the most visible item of any device produced by ad notam.

The Front View consists of 2 pages:



The *Shop Drawing - Back View* is necessary for Mirrors, Glass and additional articles pre-assembly at factory. The *Back View* consists of 2 pages:

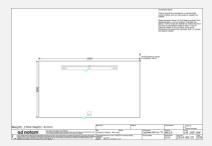

The *Shop Drawing - Wall View* is necessary for device installation on site. The *Wall View* consists of 2 pages:

Art.	Art. Rel.	Art. No.	Art. Description		UHII	Quarts
Basic Hedel						
AL	Hagic Hirror Crystal Clear Srem				107	1.4
Ar03083006	Officer Foll / Officer Print					
A3	Hontor Image Area 18.5*	496			po	
Art20082100	Uncovering Mirror Surface up to 22"					
AS	Entrepreted IR Eye	499			pea	
Ari23062100	Uncovering 25 Epe					
A4	Driegosted Status USD	500			pes	
Art20082101	Uncovering LED Status					
A2	Branding Sticker	A410003600			pea	
ALL	Geo Locker Plate (DWMS)	437			pca	
A50	Glass Metal Plate 882 (OWHS)	445			pca	
Ar03009905	Assembly Mounting Tystem OatMS					
A8	Honitar Housting (NGS)	HOS-BURS			pes	
48	Honitor Hounting (M25)	H05-0185			pes	
Art23009007	Assembly Hounting System (HSS / GHS)					
A6	Display Frame Unit 18.5"	DPU-8185-000			pea	
A3	Deamplither (MHCC) DFU 18.5"	A#20002109			pea	
A/2/2009/008	Guing Bearupitter up to 22"					
AL2	Mail Lucker Plate 36 (OWNS)	436			pes	
AL3	Mult Retai Plate 880_36 (OVIME)	443			pes	
Mirror & Glass Or	riture					
8	Steep Facet 45*	A420862517			0.3m	
Lighting						
G	Lighting Publish: Sources	435			pes	
	Depth: 41mm	April 1			as repra	- Anna
ad not	am Million	COLUMN TWO IS NOT	Analog Park Ma	Lighted Mover TV	0619	LM 185 OF

The *Shop Drawing* – *Parts List* is a detailed articles list comprising all necessary parts for pre-assembly and final installation.

The Parts List consists of 1 or more pages:



Shop Drawing – Front View Legend – Front View

These 2 pages are directly linked and show respectively visualization and legend.

Art.	Art. Rot.	Art. Description	UNIT	Quantity	Midth	Height	Depth	Dismeter	e-Peaktors	y-Pusition
See.	Notel									
A1	Hegic Nimur Crystel Clear Smm		pes	1	3500	900	5			
AB	Honksr Hounting (M25)		100	1	34	302	13		545	
A11	Glass Locker Plate (OVIMS)		pea	1	60	60	27			
ALD	Glass Hetal Plate 660 (DWMS)		pca	1	000	304	29		360	77
A9	Monitar Hounting (MISI)		pcs	1	34	302	13		2041	12
A6	Display Prane Unit 35.5"		pen	1	478	302	34		544	1.0
A7	Beampilter (MNCC) DPU 18.5"		pes	1	510	31.0	4		545	10
Light	-									
a	Lighting Profile 001	Lighting Calor 4100K Single Sided LED-Launut	0.3m	9	54	900			0	
0	Lighting Profile 001	Lighting Calor 4100K Single Sided LED-Layout	0.3m	9	54	900			1500	
C4	Lighting Power Adaptor Holder 2490		pea	1	60	200	3		104	66
65	Lighting Power Adaptor 2490		pen		52	153	32		108	68
Acces	ouries									
04	Surface Speaker		pes	1			22	70	134	26
62	Surface Speaker		pen				12	70	1465	26
	ht: 27KG Depth: 41mm		- Rack vi	Fier	19/200	Dayte	i Marrar Y	v neto		185 CW

Shop Drawing – Back View

Legend – Back View These 2 pages are directly linked and show respectively visualization and legend.



Shop Drawing - Wall View

Legend – Wall View These 2 pages are directly linked and show respectively visualization and legend.

Shop Drawing – Parts Lists These pages are directly linked and show complete scope of delivery (items and processing services):

WOODEN CRATE AND GIFTBOX INSPECTION

You purchased a high end device. Verify wooden crate and gift box integrity before unloading the product. If damage is noticed write all the information on the bill of lading and hand it to the driver of the forwarder. Pictures will be required for the claim process. You can consult your ad notam reseller for additional information.

WOODEN CRATE



WHAT IS IN THE BOX

Please check the following contents for completeness before using the product.



GLASS & MIRROR



OWNER'S MANUAL



IN WALL BRACKET (Optional)



MAGNET HOLDER PLATE (Optional)



FIXATION MAGNET (Optional)



DIGITAL CLOCK IR REMOTE (Optional)



DISTANCE RING (Optional)

MOUNTING YOUR AD NOTAM

BEFORE YOU START

Safety, environment, expert tips!

SAFETY

WARNINGS

- ▲ SAFETY. To prevent damage to your ad notam product or injury to yourself or to others, read the safety instruction in their entirety before installing and operating the product. Keep these safety instructions where all those who use the product will read them. Warranty will be null and void for any damage resulting from installation and operation not respecting these instructions.
- ▲ WALL FIXINGS. ad notam doesn't provide screws and dowels with this product. Consider the construction environment, wall type, product weight and positioning when selecting raw bolts or resin anchors.
- ▲ QUALIFIED PERSONNEL. Mounting this product requires structural measures and special skills. Refer exclusively to qualified personnel.
- ▲ WOODEN CRATE. The wooden crate is securing glass and mirror. Incline the wooden crate adding a thick spacer (eg. 10 cm wooden bar) underneath the front foot to avoid all glass and mirror to fall off the crate while removing the front panel. Open carefully making sure a second person is on site.
- ▲ ORIGINAL MATERIAL. Always use ad notam supplied wall brackets and original spare parts to perform installation.

ENVIRONMENT

ad notam products include heavy, bulky and delicate items. To prevent damages to your ad notam product or injury to yourself or to others, prepare the installation environment properly.

CAUTIONS

- ENVIRONMENT. Clean the handling and installation environments properly before installation.
- ✓ HANDLING. Handling ease requires proper planning. Verify size, turning angles, bumps and potential hurdles before handling.
- ENVIRONMENT. ad notam mounting systems are engineered for vertical use only. Verify walls' verticality and items vertical and horizontal alignment to prevent serious injuries and product damage.
- ✓ HANDLING. Cushions the floor properly using soft anti slip mats near the handling areas. Lay the items gently on these cushioned anti slip surfaces when needed.
- ✓ HANDLING. Tilt the mirror top to the wall with an adequate angle of incidence when resting.

EXPERT TIPS

 TOOLS ad notam products installation requires specific professional tools. Verify the following page for a comprehensive list.


MOUNTING YOUR AD NOTAM

ON WALL MOUNTING - WALL PREPARATION

Your own ad notam have been pre-assembled according to your configuration instruction. The product back view including preassembled items is visible on your shop drawing Page 3 (Back View) you can find additional information on the visible items on page 4 (Legend - Back View).

To determine the proper position of your ad notam on the wall the ad notam configuration provides an ideal Wall View preparation. The Wall View (including necessary items) is visible on shop drawing page 5 (Wall View). Consult your shop drawing page 6 (Legend - Wall View) for additional information concerning spare parts necessary for installation. Refer to these pages during installation.

EXPERT TIPS – TOOLS

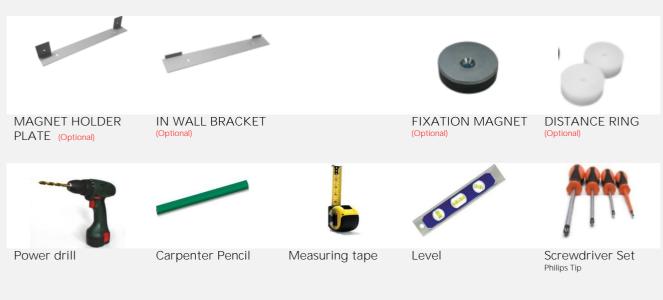



Bolts, screws, screw anchors, lock washers

accident or injury.



Please read the safety precautions before positioning the product. Always use the supplied wall brackets and parts. Wall mounting this product requires special skills and should only be performed by gualified personnel. Electrical connections are to be performed by a skilled technician following local regulations. Two people are required to lift and carry a product that weights more than 25kg or 55lbs. ad notam does not guarantee the efficiency of screws and dowels delivered with this product. Those may be replaced on site considering the construction environment, type of wall, product weight and positioning. ad notam bears no responsibility for

improper mounting or any mounting that results in



Please Note:

The corners and edges of the glass are very delicate. Take care that they do not hit the wall, ceiling or floor in any way to avoid damages and split-offs.

STEP 1 - WALL PREPARATION

1. The following slides explain how to identify and mark the drilling points on the wall. ad notam provides different mounting combinations. Verify your own *shop drawing page 6 (Wall View – Legend)* to identify your wall mounting option. The column Art. Description provides the description of the selected items necessary for your wall preparation.




	Art. Ref.	Art. Description	Unit	Quantity	Width	Height	Depth	Diamete	er x-Positio	n y-Positi
Basic Mo	del									
Al	Magic Mirror Crystal Clear Smm		pcs	1	1600	900	5			
A12	Wall Locker Plate 36 (OWMS)		pcs	1	60	60	30		77	0
A13	Wall Metal Plate 880_36 (OWMS) (1)		pcs	1	880	68	33		80	0 1
ootoo										
ootno	Les I The xly middle-position of the Jihil Meta	I Plate 880_36 (OWMS)	" is referrer	I to the glass top	left point					
l) Cautio	165 if The xly mobile-position of the Jonal Media 2 27KG Depch: 41.mm	I Plate 880_36 (OWMS)		i to the glass top	left point	Spite		2	h đaposi	Agoni d
Veight	n! The x/y middle-position of the "Wall Meta : 27KG Depth: 41mm	I Plate 880_36 (OWMS)	Ī		Pried	Îgrata.	histine Uighted M	- N	arts.	tarind train-frequence At Ba


- 2. Reference point. Identify your ad notam position on the wall and identify the bottom left corner of the crystal. Mark this point with the pencil.
- 3. Reference point (Point 0) is used in the ad notam *shop drawing Wall View Legend (Page 6)*. The items reference coordinates are starting from here.
- 4. Art. Description Verify your own configuration page 6 (Wall View Legend) to identify your mounting option. The column provides the description of the selected items necessary for your wall preparation.





- 5. Art. Description IN WALL BRACKET. (*Not found? Move to the next step.*) Verify x-position and y-position. These coordinates correspond to the IN WALL BRACKET bottom left corner. Start from the reference point moving to the right on the horizontal axe and mark the point (y-position).
- ✓ EXPERT TIPS. Before proceeding consider your crystal position. For recessed installation the drilling points must be positioned at 30 mm from the back of your crystal (25 mm for IN WALL BRACKET 150, 15 cm width). For flush installation consider: Glass Depth + 30 mm (25 mm for IN WALL BRACKET 150, 15 cm width). Marginal inaccuracy can be corrected with the long slots in the IN WALL BRACKET.
- 6. Art. Description. IN WALL BRACKET. (*Not found? Move to the next step.*) Position the IN WALL BRACKET and mark the drilling points with a pencil. Caution: you might have more IN WALL BRACKETs. Repeat the procedure for each one of them.

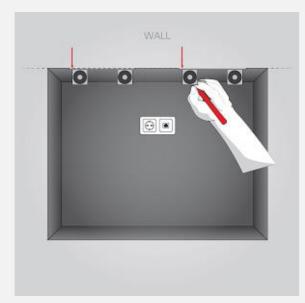

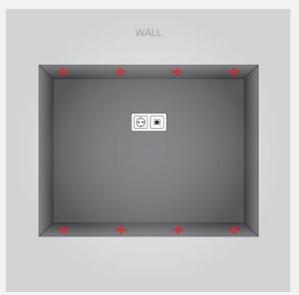

- 7. Art. Description MAGNET HOLDER PLATE. (*Not found? Move to the next step.*) Verify x-position and y-position. These coordinates correspond to the MAGNET HOLDER PLATE bottom left corner. Identify the glass upper edge considering your glass height starting from your reference point. From the upper edge left corner moving to the right on the horizontal axe identify the x-position of the MAGNET HOLDER PLATE.
- ✓ EXPERT TIPS. Before proceeding consider your crystal position. For recessed installation the drilling points must be positioned at 30 mm from the back of your crystal (25 mm for MAGNET HOLDER PLATE 150, 15 cm width). For flush installation consider: Glass Depth + 30 mm (25 mm for MAGNET HOLDER PLATE 150, 15 cm width). Marginal inaccuracy can be corrected with the long slots in the MAGNET HOLDER PLATE.
- 8. Art. Description. MAGNET HOLDER PLATE. (*Not found? Move to the next step.*) Position the MAGNET HOLDER PLATE and mark the drilling points with a pencil. Caution: you might have more MAGNET HOLDER PLATEs. Repeat the procedure for each one of them.

STEP 2 - WALL PREPARATION

- 1) The following paragraphs explain how to mount the different elements on the wall. ad notam provides different mounting combinations. Verify your own *shop drawing page 6 (Wall View Legend)* to identify your wall mounting option. The column Art. Description provides the description of the selected items necessary for your wall preparation.
- ✓ ARCHITECTURAL Structural measures must be accomplished for an in-wall installation. ad notam declines any liability for the screws and screw anchors used on site.
- ✓ ENVIRONMENT. ad notam mounting systems are engineered for vertical use only. Verify walls' verticality and items vertical and horizontal alignment to prevent serious injuries and product damage.
- 2) You marked all drilling points on the wall. Drill at the marks and proceed adding the appropriate screw anchors.





- 3) Art. Description Verify your own configuration page 6 (Wall View Legend) to identify your mounting option. The column provides the description of the selected items necessary for your wall preparation.
- 4) Art. Description PLASTIC SPACERS. (*Not found? Move to the next step.*) These items need to be combined with the IN WALL BRACKET for recessed installation flush to the wall. Position the item below the IN WALL BRACKET before securing.
- 5) Art. Description IN WALL BRACKET. (*Not found? Move to the next step.*) Secure the IN WALL BRACKET verifying screws anchors alignment before firmly locking the first screw. Proceed with the other screws mirroring their position right and left.



- 6) Art. Description MAGNET HOLDER PLATE. (*Not found? Move to the next step.*) Secure the MAGNET HOLDER PLATE verifying screws anchors alignment before firmly locking the first screw. Proceed with the other screws mirroring their position on the right and left side.
- 7) Caution: you might have more MAGNET HOLDER PLATE s. Repeat the procedure for each one of them.

ON WALL MOUNTING - FINAL ASSEMBLY

Your own ad notam has been pre-assembled according to your configuration instruction. The product back view including preassembled items is visible on your *shop drawing Page 3 (Back View)* you can find additional information on the visible items on *page 4 (Legend - Back View)*. The product Wall View is visible on *shop drawing page 5 (Wall View)*. Consult your *shop drawing page 6 (Legend - Wall View)* for additional information concerning spare parts necessary for installation. Refer to these pages during installation.

✓ EXPERT TIPS – TOOLS




Glass Suction Cups

STEP 3 - FINAL ASSEMBLY

The following slides explain how to identify, mount and secure your ad notam to the wall. ad notam provides different mounting combinations. Verify your own *shop drawing page 6 (Wall View – Legend)* and *shop drawing page 4 (Back View – Legend)* to identify your monitor mounting option. The column Art. Description provides the description of the selected items necessary for your installation.

- ENVIRONMENT. ad notam mounting systems are engineered for vertical use only. Verify walls' verticality and items vertical and horizontal alignment to prevent serious injuries and product damage.
- ✓ ENVIRONMENT. Clean the handling and installation environments properly before installation.
- ✓ HANDLING. Cushions the floor properly using soft anti-slip mats near the handling areas. Lay the items gently on these cushioned anti slip surfaces when needed.
- ✓ HANDLING. Tilt the mirror top to the wall with an adequate angle of incidence when resting.
- 1) You prepared the wall marking the points, installed the necessary items. After cleaning the installation environment you can proceed with the final assembly.
- EXPERT TIPS. Before proceeding with the final assembly evaluate your installation requirements. Your own unique ad notam has been pre-assembled at factory and additional items, wiring and connections need to be prepared on site. Evaluate your handling clearance Cushion the handling area properly using soft anti-slip mats. Lay the items gently on these cushioned anti slip surfaces when needed.
- Art. Description Verify your own shop drawing page 6 (Wall View Legend) and shop drawing page 4 (Back View Legend) to identify your final assembly option. The column Art. Description provides the description of the selected items necessary for your installation
- ✓ EXPERT TIPS. Clean the crystal rear side and the monitor properly before proceeding.

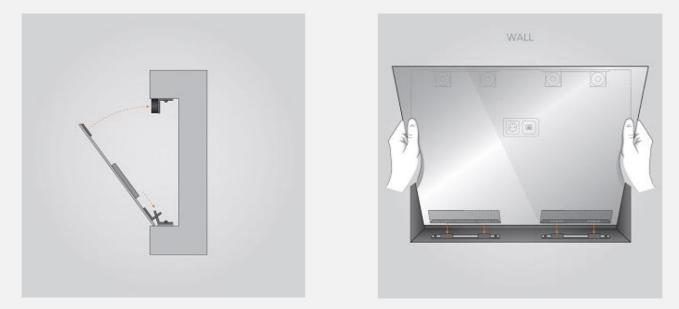

- 3) Art. Description SELF ADHESIVE METAL PLATE. (Not found? Move to the next step.) The SELF ADHESIVE METAL PLATE (counterpart for IN WALL BRACKET) is pre-mounted to the back side of the glass. Use the suction cups to elevate the crystal in order to secure the slide-in mechanism at the bottom of the crystal.
- 4) Art. Description FIXATION MAGNET. (*Not found? Move to the next step.*) Gently bring the top part of the crystal in vertical position, the magnets will pull and hold the crystal providing additional support.

ADJUSTING YOUR DIGITAL CLOCK (OPTIONAL)

The digital clock features bright white LED digit design, and can be combined with any of the ad notam glass and mirror options for a cool complete glowing look. A backup battery provides power to the digital clock when the primary source of power is interrupted or unavailable.



DISPLAY ON/OFF

Use the power/esc key to toggle the clocks display between ON and OFF mode.



SETTING TIME USING NUMERIC KEYS

You can set the time of the digital clock by using the numeric keys on the remote. To do so please follow the following steps:

STEP 1

Press the time key to enter the time setting mode.



STEP 2

Press the numeric keys in a sequence representing the desired time. For example to set the clock to 14:35 please press the numeric keys in the following order: 1, 4, 3 and 5.



In order to exit the time setting mode, at any time, WITHOUT saving your changes please press the power/esc key.

SETTING TIME FORMAT (12H/24H) You can choose the time format between 12 hours and 24 hours display. To do so please follow the following steps:

STEP 1

Press the edit key to enter the format setting mode.



STEP 2

Press the up or down keys to change the time format display.



STEP 3

Press the enter key to confirm your changes and exit format setting mode.



COPYRIGHTS, LICENCES TROUBLESHOOTING & CERTIFICATES

ad notam[®]

MAGIC MIRROR®

MIRROR IMAGE®

ad notam[®], MIRROR IMAGE[®] and MAGIC MIRROR[®] are licensed trademarks of ad notam.

HDMI, the HDMI logo and high definition multimedia interface are trademarks of HDMI Licensing LLC.

This product, parts, components and the assembly are protected by or might be part of one or more of the following intellectual property rights:

US 7455412 B2 US 7589893 B2 EP 1168285 B2 EP 1429308 B2 EP 1809828 B1



ad notam[®]

HIDDEN TECHNOLOGY – TECHNOLOGY BECOMES INVISIBLE.

To solve any ad notam product related problem, you can consult our online support. You can select your language and enter your product model number.

Go to www.ad-notam.com

SERVICE & SUPPORT

Warranty terms apply Damaged goods terms apply RMA procedure terms apply

For more detailed info please visit our website at: **www.ad-notam.com**

CONTACT INFORMATION

ad notam AG www.ad-notam.com

Copyright © 2015 by ad notam. All Rights Reserved.

This Manual, as a whole, in part or excepts, may not be reproduced, copied, stored in data retrieval system or transferred electronically, mechanically or in any other way, shape or form without prior written authorization by ad notam.

Specifications of the ad notam products are subject to unannounced changes. This manual may thus not reflect the current technical status of ad notam's product.