


ACCESSORIES

LOUDSPEAKER LS-VS-004

The surface speaker is the most efficient and vibrant sound system for environments up to 15 square meters. It is tailored for installation with any plain surfaces as glass or mirror, wood or the like as it features an electro dynamical exciter for stimulating bending waves on plates. The LS-VS-004 unit can be attached to the surface of the plate by gluing or screwing. Installed invisible on the rear side of the glass or mirror, surface speakers are a good solution for applications where standard speakers cannot be installed for optical reasons or for protection against environmental conditions or vandalism.

PACKAGE INCLUDES

- 1 x Surface Loudspeaker LS-VS-004
- 1 x Loudspeaker Cable

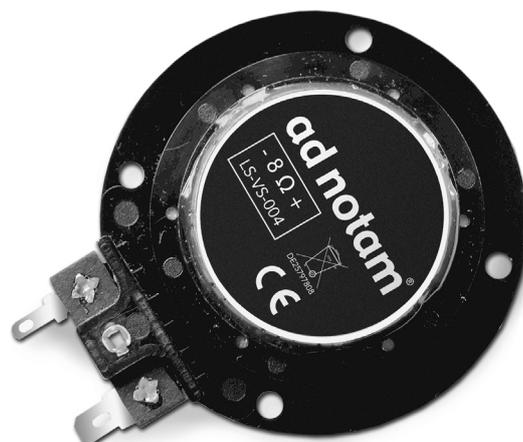

ARTICLE NO.

Art.No.	Code	Length Loudspeaker Cable
LS-VS-004	-	1.5m
	_5	5m

ACCESSORIES

LOUDSPEAKER LS-VS-004

TECHNICAL SPECIFICATION

Features	LS-VS-004
Dimensions	70 x 70 x 20mm / 2.76" x 2.76" x 0.79"
Weight	0.13kg
Voice coil diameter	32mm / 1.25"
Rated power	30W, max. Power 60W
Impedance	8Ohm
Sensitivity	85dB
Frequency response	60 - 20000Hz