

GLASS AND MIRRORS

MAGIC MIRROR

The MAGIC MIRROR allows the image area of the **ad notam** monitor system to appear in the "ON" position and completely vanish when turned „OFF" leaving a 100% homogeneous mirror surface on the front.

The MAGIC MIRROR is designed for combination with the **ad notam** monitor systems and fulfills the necessary surface, hardness, and tension qualities.

The position of the image area within the mirror surface is freely selectable. The flexibility is only limited by the outline dimensions of the **ad notam** monitor system which need to be considered when installing the monitor system on the backside of the mirror.

Please use the **ad notam** glass orderform as appendix to your purchase order to supply data.


Transmission of image area: 25% +/- 5

Reflection of mirror surrounding image area: 35% +/- 5

Reflection of image area: 35% +/- 5




ARTICLE NO.

MAGIC MIRROR		Code	Thickness	Type
MM-SM-		005 R	5mm	Standard
		009 R LSG	8.8mm	Laminated Safety Glass

GLASS AND MIRRORS

MAGIC MIRROR

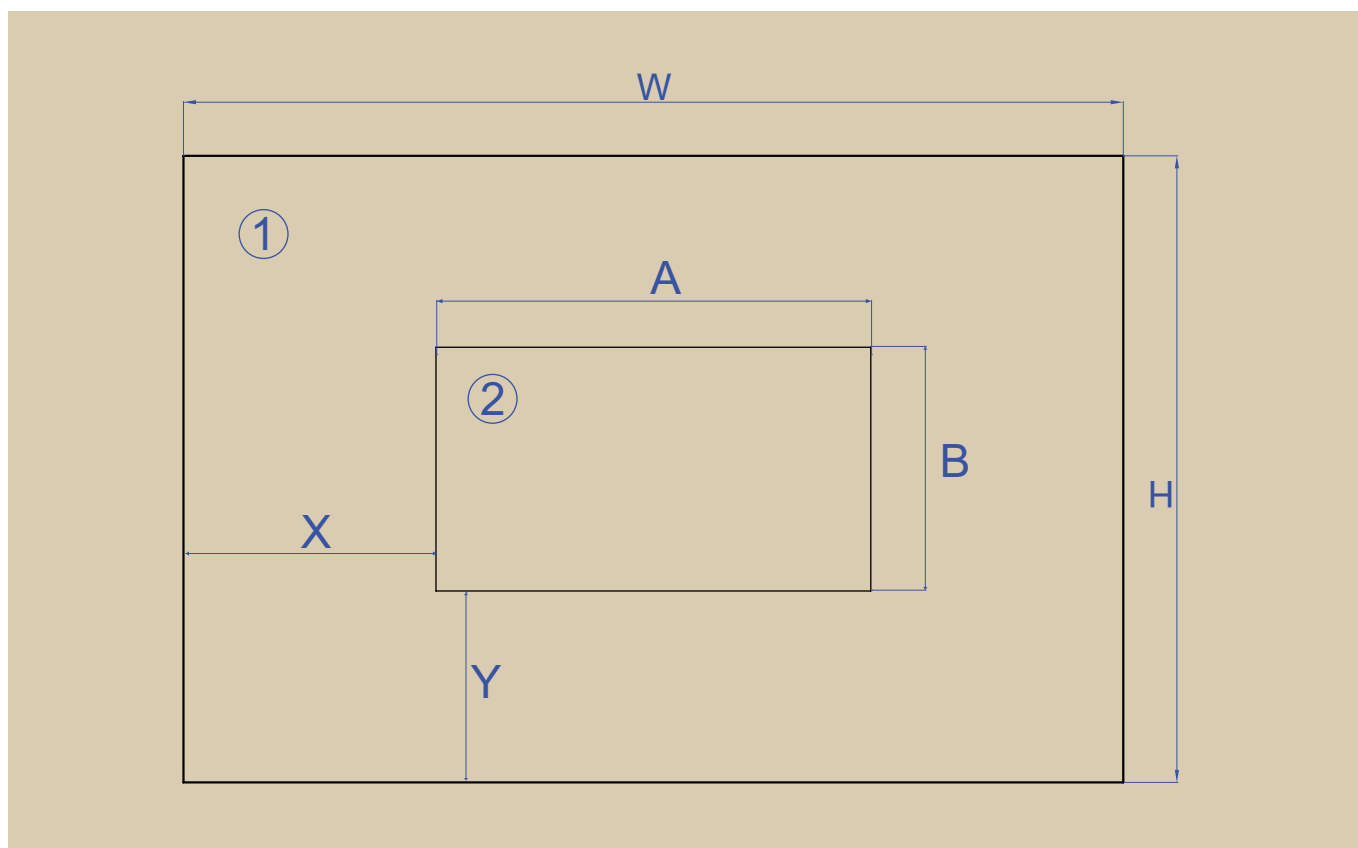

① MAGIC MIRROR
Max. dimensions:

Thickness in mm	max. W in mm	max. H in mm	Weight per m ²
5	3150	2000	12.5 kg
8.8	3150	2000	22.0 kg

② IMAGE AREA
Combinable monitor system sizes:

Image Area	min.	max.
Size (inch)	13.3"	82.0"

Tolerances	Application Characteristics	Cleaning Note
<p>a) If the difference between ordered dimensions and actual received product is exceeding 2mm in measurements of H & W, the material is defective. In this case the glass may be exchanged.</p> <p>b) Slightly optical irritations on the surface of the material may appear as accumulations of very small black spots. This is due to the characteristics of the material and it is not possible to avoid or clean this effect. Please check immediately after receiving your goods if one of these accumulations exceeds an expanse of three cm². In this case the material is defective and may be exchanged.</p>	<p>a) The specified mirror is suitable in moist areas but for indoor use only!</p> <p>b) The standard implementation is not usable in public facilities or at public places. Applications in these surroundings have to be implemented with laminated safety glass (LSG). Please consider this with your order or planning.</p> <p>c) Installation & mounting guidelines for glass have to be considered!</p> <p>On demand authorized retailers can be supported with training records!</p>	<p>a) Do not use any rubbing or caustic cleanse!</p> <p>b) Use only a clean and dust-free cloth, by using a customary glass detergent!</p> <p>c) Consider the material specification!</p>
		<p>Optical Characteristics</p> <p>a) Please note that due to the darkened look, the brightness of the monitor system and the reflectivity of the mirror are affected somewhat.</p> <p>b) Facetted areas may appear with a slightly deviating shade.</p>